

# ServoMaster: Metadata: controller/allow\_disconnect

## Table of contents

1 Definition.....	2
-------------------	---

## 1. Definition

---

`controller/allow_disconnect` *feature* reports whether the controller supports disconnected operation.

`controller/allow_disconnect` *property* determines whether controller departure is treated as a transient or catastrophic condition.