

# ServoMaster: Metadata: servo/range/min

## Table of contents

1 Definition.....	2
-------------------	---

## 1. Definition

`servo/range/min` *property* contains the current minimum servo position expressed in units defined by [servo/range/units](#) *property*.

See also: [servo/range/max](#).